

MOUNTING DIMENSIONS (for reference only)

OUTPUT CONNECTIONS

Pin 1 + Supply voltage

Pin 2 Ground

Pin 3 No connection

Pin 4 Output voltage

Arrow on bottom of housing indicates direction of flow

